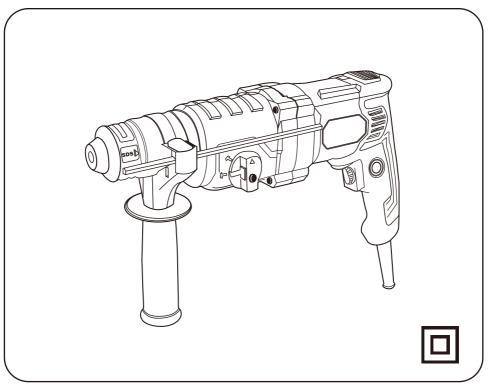
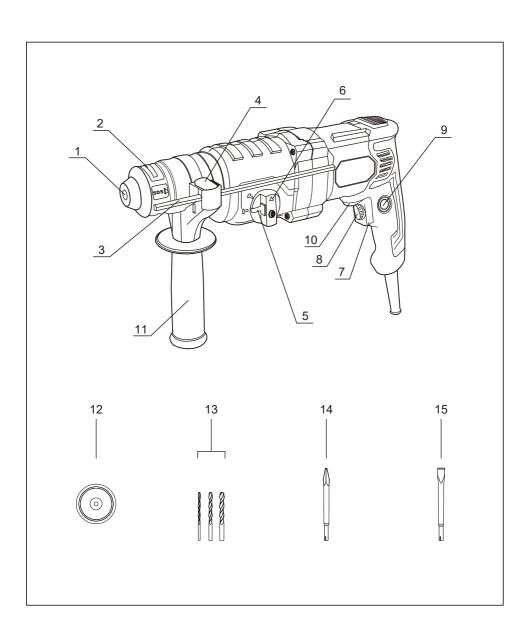
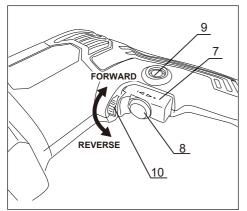


ED-2600R

(B) OWNER'S OPERATING MANUAL







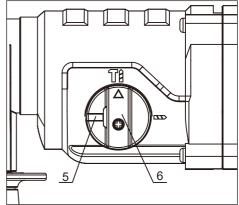
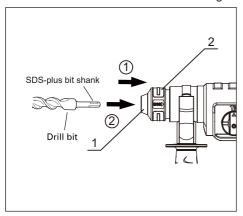


Fig. 1

Fig. 2



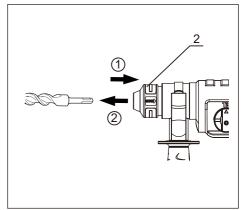
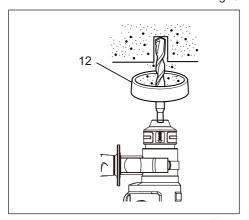


Fig. 3

Fig. 4



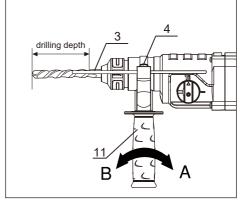


Fig. 5

Fig. 6

THANK YOU FOR BUYING OUR PRODUCT.

To ensure your safety and satisfaction, carefully read through this OWNER'S MANUAL before using the product.

General Power Tool Safety Warnings

⚠ WARNING! Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your corded or battery-operated (cordless) power tool.

1) Work area safety

- a) Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- b) Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or firmes
- c) Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

2) Electrical safety

- a) Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) Avoid body contact with grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is grounded.
- c) Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- d) Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- e) When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f) If operating a power tool in a damp location is unavoidable, use a ground fault circuit interupter (GFCI) pro-tected supply. Use of an GFCI reduces the risk of electric shock.

3) Personal safety

- a) Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal inlury.
- b) Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, nonskid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c) Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- d) Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e) Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- f) Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewelry or long hair can be caught in moving parts.

- g) If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dustrelated hazards.
- h) Do not let familiarity gained from frequent use of tools. Do not become complacent and ignore tool safety principles. A careless action can cause severe injury within a fraction of a second.

4) Power tool use and care

- a) Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- b) Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c) Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d) Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- e) Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tools operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- f) Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g) Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.
- h) Keep handles and grasping surfaces dry, clean and free from oil and grease. Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

5) Service

a) Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

INSTRUCTIONS FOR SAFE HANDLING

- Make sure that the tool is only connected to the voltage marked on the name plate.
- Never use the tool if its cover or any bolts are missing. If the cover or bolts have been removed, replace them prior to use. Maintain all parts in good working order.
- 3. Always secure the tool when working in elevated positions.
- Never touch the blade, drill bit, grinding wheel or other moving parts during use.
- Never start the tool when its rotating component is in contact with the work piece.
- Never lay the tool down before its moving parts have come to a complete stop.

7. ACCESSORIES:

The use of accessories or attachments other than those recommended in this manual might present a hazard.

8. REPLACEMENT PARTS:

When servicing use only identical replacement parts.

ROTARY HAMMER SAFETY PRECAUTIONS

- Mount the bit correctly as described in the operation instructions. Unless properly mounted, the bit may shoot out.
- Do not use on surfaces covering electrical wiring. Before using on walls, floors or ceilings, check for the location of any electric wiring.
- Hold the tool securely with both hands while operating. The tool may recoil, causing injury to your hands, if not held firmly.
- Do not touch the bit as it becomes extremely hot during operation.
- 5. Never point the hammer bit towards any person.

DESCRIPTION

- 1. Tool holder (SDS-plus)
- 2. Locking sleeve
- 3. Depth stop
- 4. Depth stop locking button
- 5. Push button
- 6. Mode selector
- 7. Trigger switch
- 8. Speed control dial
- 9. Lock-on button
- 10. Forward/Reverse lever
- 11. Auxiliary handle

ACCESSORIES

- 12. Dust protection cap x 1pc
- 13. Drill bits x 3pcs (8/10/12mm x 150mm)
- 14. Point chisel x 1pc (14mm x 250mm)
- 15. Flat chisel x 1pc (14mm x 250mm)

SPECIFICATIONS

	1
Impact rate 0-4,8	60min ⁻ '
Impact energy	3.3J
Drilling capacities	
steel	.13mm
concrete	26mm
wood	30mm
Shank type SI)S-plus
Net weight	. 3.0kg

APPLICATIONS

(Use only for the purposes listed below.)

- 1. Drilling concrete.
- 2. Crushing, chipping, grooving and cornering concrete.
- 3. Starting holes and driving anchors.

SWITCH (Fig. 1)

CAUTION: Before plugging in the tool, always check to see that the switch trigger actuates properly and returns to the "OFF" position when released.

- This tool starts and stops by depressing and releasing the trigger switch(7).
- The rotation speed and impact rate can be adjusted by turning the speed control dial (8)
- For continuous operation, press the lock-on button (9)
 while the trigger switch is depressed. Depress again to
 release the lock.

WARNING: NEVER use tool without a fully operative switch trigger. Any tool with an inoperative switch is HIGHLY DANGEROUS and must be repaired before further usage.

CHANGING DIRECTION (Fig. 1)

To reverse the direction of rotation, stop the tool by releasing the trigger switch and shift the forward/reverse lever (10) to the right or left.

To rotate the drill bit in forward direction, set the forward/reverse lever in the left position when viewed from the handle end of the tool.

To rotate the drill bit in reverse direction, set the forward/reverse lever in the right position.

CHANGING THE ACTION MODE (Fig. 2)

ROTARY HAMMERING MODE: Turn the mode selector (6)

to $\[\[\] \]$ symbol while pressing the push button (5).

DRILLING MODE: Turn the mode selector to **♠** symbol while pressing the push button.

HAMMERING MODE: Turn the mode selector to 's symbol while pressing the push button.

BIT ROTATION: Turn the mode selector to \$\(\phi\) symbol while pressing the push button. The rotation is released, turn the chisel and adjust the tool to desired position.

MOUNTING AND REMOVING THE BIT

MAKE SURE THAT THE TOOL IS DISCONNECTED FROM THE POWER SUPPLY.

ONLY USE ACCESSORIES WITH CLEAN, GREASED INSERTION ENDS.

MOUNTING (Fig. 3)

- Push the locking sleeve (2) toward the hammer body and hold.
- Insert the drill bit into the tool holder (1) until it reaches the bottom, and then release the locking sleeve to lock the drill bit
- 3. Pull the drill bit to ensure that it is secured.

REMOVING (Fig. 4)

- Push the locking sleeve (2) toward the hammer body and hold.
- 2. Remove the bit from the tool holder.

DUST PROTECTION CAP (Fig. 5)

When drilling upward, push dust protection cap (12) over the drill, with the open side showing towards the end of the bit. Empty as often as is required, and push over the drill again. The dust protection cap largely prevents the entry of driling dust into the tool holder during operation. When inserting the tool, take care that the dust protection cap is not damaged.

AUXILIARY HANDLE (Fig. 6)

The auxiliary handle (11) can be rotated 360°.

Loosen the handle grip by turning in dierction B, and tighten it at an easy-to-use position by turning the grip in direction A.

DEPTH STOP (Fig. 6)

- 1. Press the depth stop locking button (4) and inster the depth stop (3) into the mouting hole on the auxiliary handle (11).
- 2. Adjust the depth stop while pressing the depth stop locking button, and release it at desired depth of the hole.

NOTE: The drilling depth is the distance between the tip of the bit and the tip of the depth rod.

MAINTENANCE

- 1. For safe and proper working, always keep the machine and ventilation slots clean.
- 2. A damaged dust protection cap should be changed immediately. We recommend having this carried out by an after-sales service.

DO NOT MAKE ANY ADJUSTMENTS WHILE THE MOTOR IS IN MOTION.

ALWAYS DISCONNECT THE POWER CORD FROM THE RECEPTACLE BEFORE CHANGING REMOVABLE OR EXPENDABLE PARTS (BLADE, BIT, SANDING PAPER ETC.), LUBRICATING OR WORKING ON THE UNT.

WARNING!

To ensure safety and reliability, all repairs should be performed by an AUTHORIZED SERVICE CENTER or other QUALIFIED SERVICE ORGANIZATION.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.



VARNING To reduce the risk of injury, user must read instruction manual "



Class | construction tool in which protection against electric shock does not rely on basic insulation only, but in which additional safety precaution, such as double insulation or reinforced insulation, are provided."

KYOCERA Industrial Tools Corporation 2-2-54 Matsuhama-cho, Fukuyama-shi, Hiroshima-ken, 720-0802 Japan